


Operating Manual Controller Single Split Designer

wall-mounted Air Conditioner 3.6-230 HA


1. Remote Controller – COOL Operation:

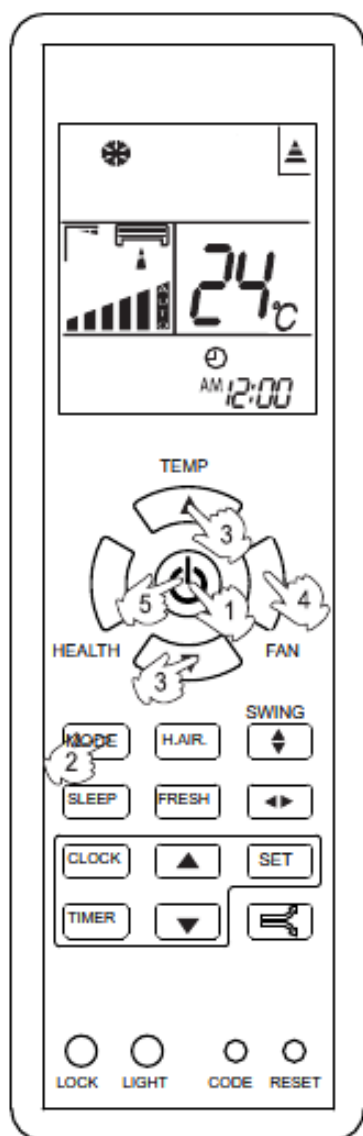

Button (ON/OFF) ① + ⑤

- The air conditioner will start or stop operating.

Button „Mode“ - Betriebsart: ②

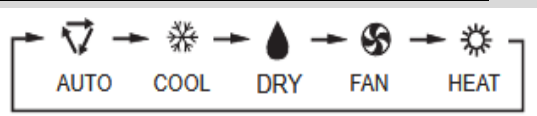

- (Operating mode: COOL)
Symbol **must always** be displayed!
- **Without Function:**
- (Auto)
- (Dry)
- (Fan)
- (Heat)

To Set the Room temperature:: ③


- (warmer)
Button to raise the temperature setting.
- (colder)
Button to lower the temperature setting.

→ **If kept depressed, it will increase/decrease rapidly..**

Button „FAN“: ④

- AUTO As the room temperature approaches that of the temperature setting, the fan speed becomes slower.
- Five bars High fan speed
- Three bars Medium fan speed
- Two bars Low fan speed

2. Display Panel of remote controller:

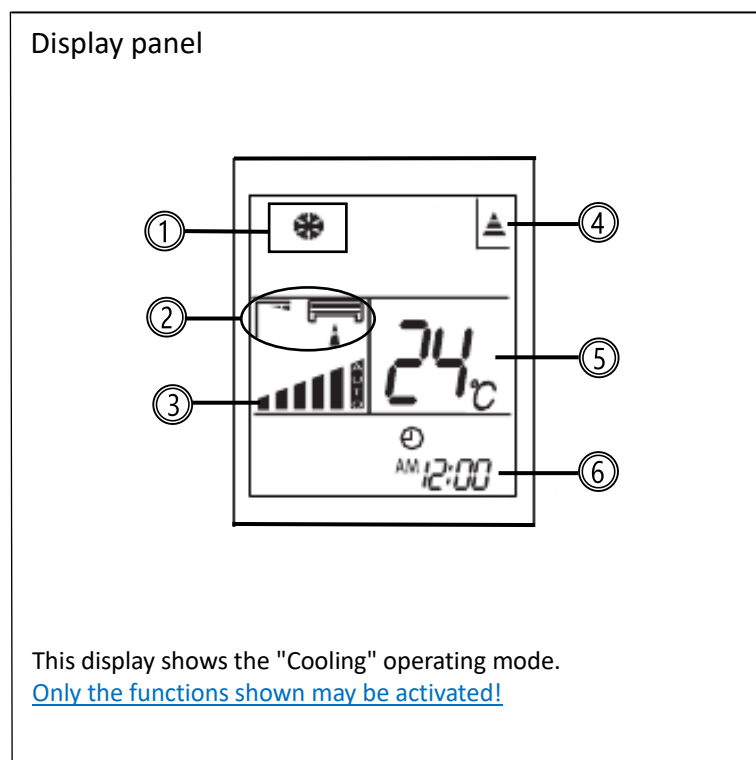

- 1) MODE – Cool Operation
- 2) SWING UP/DOWN & RIGHT/LEFT – Indicator
- 3) Fan Speed Indicator
- 4) Transmit Indicator
- 5) Temperature SET Indicator
- 6) Clock Indicator

The following keys **must not** be activated:

- „Timer“
- „Fresh“
- „Sleep“
- „H. Air“
- „Health“

The following keys are **not functional**:

- LOCK
- LIGHT
- CODE
- RESET

3. SWING – MODE:

- For each press of  button, air flow direction on remote controller displays as follows:

→ Pos.1 → Pos.2 → Pos.3 → Pos.4 → Pos.6

→ The vertical flap will swing according tot he above positions.

Vertical flap

Pos.1	
Pos.2	
Pos.3	
Pos.4	
Pos.5	
Pos.6	 (Auto swing)

- For each press of  button, air flow direction on remote controller displays as follows:

→ Pos.1 → Pos.2 → Pos.3 → Pos.4 → Pos.5 → Pos.6 → Pos.7 → Pos.8

→ The horizontal louvers will swing according to the above positions.

Horizontal louvers

Pos.1	
Pos.2	
Pos.3	
Pos.4	
Pos.5	
Pos.6	
Pos.7	
Pos.8	

NOTE: When restart after remote turning off, the remote controller will automatically memorize the previous set swing position.


4. Important Information:

1) Cooling Operation:

- The Cooling mode will not operate if the preset temperature is set higher than the actual room temperature.
- **Temperature setting range:**
→ Min: 18 Grad
→ Max: 32 Grad

2) Fan speed selection:

Press „Fan“ button. For each press, fan speed changes as follows:

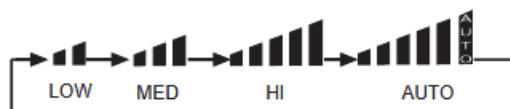

3) Clock Set:

- Press „CLOCK“ button. „AM“ or „PM“ flashes. Press ▲ or ▼ to set correct time. If the button is kept depressed, time will change quickly. After time setting is confirmed, press „SET“, „AM“ or „PM“ stop flashing, while clock starts working.



4) Cancel „Health“ / „Fresh“ Mode:

- Press Health or Fresh button. Health or fresh function is started. For twice press, the operation stops.

5) Cancel „Sleep“ Mode:

- Sleep button press again.

6) Cancel „Timer“ Mode:

- Just press „Timer“ button several times until Timer mode disappears.

7) Cancel „Power/Soft“ Mode:

- Press „Power/Soft“ button  twice, „Power/Soft“ disappears.

NOTE:

- ➔ The air conditioners are in like-new condition. There are no scratches, dents, or other damage.

Damage of any kind will be charged in full. This usually means at least a repainting of the housing.

The air conditioners should be treated with care!